


# Minnow Battery Installation

This document will guide you through installing the battery and then resetting your logger after a new battery is installed. This reset is needed in order to set the "real time clock" after a loss of power.

1. Remove the back cover (#1 Philips screwdriver)
2. Remove the circuit board. Place the logger face down and press the edge of the box to unseat the board and then pry it out using your fingernail.

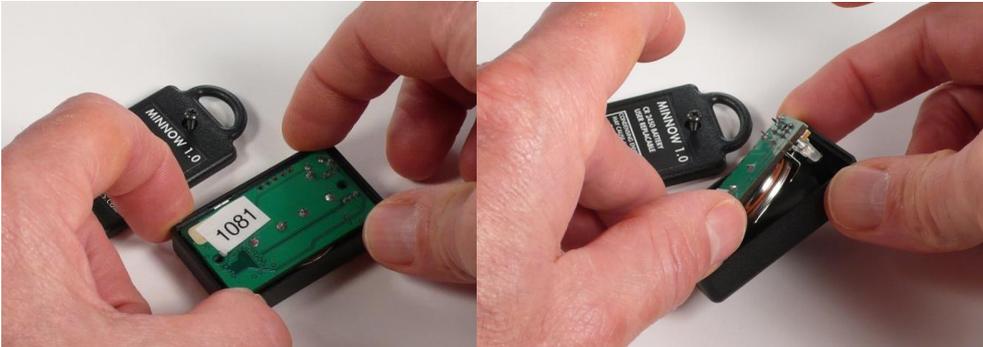


3. Insert the new battery with the + terminal up and then close the back cover. Be careful not to over tighten the screws.
4. Download and install the "Minnow Application Program" (Windows only) from <http://senonics.com/support.html>
5. Open the application and go to the "Configuration Wizard"



6. Plug the Minnow into the computers USB port
7. The Connection Icon will be blue if connected (be patient the first time)



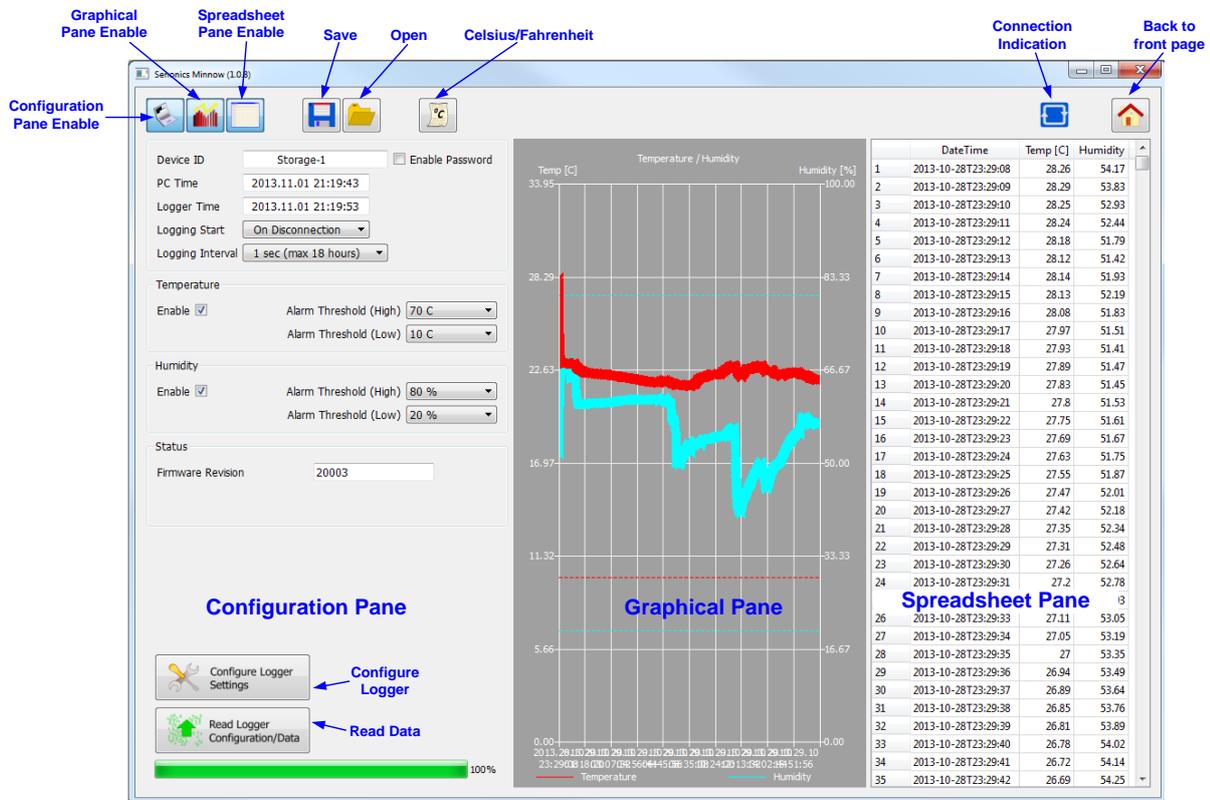

8. Choose a "Logger Start" option, a "Logging Interval" option and any alarms if needed.
9. Click "Configure Logger" and you should be ready.

*This guide is only for battery install. Refer to User Guide for a detailed set of instructions.*