



Depending on your computer the MSR viewer only can display files up to 10 million time steps. Larger files can be automatically divided when reading.

This document shows this process.


1. First start the CARD reader.

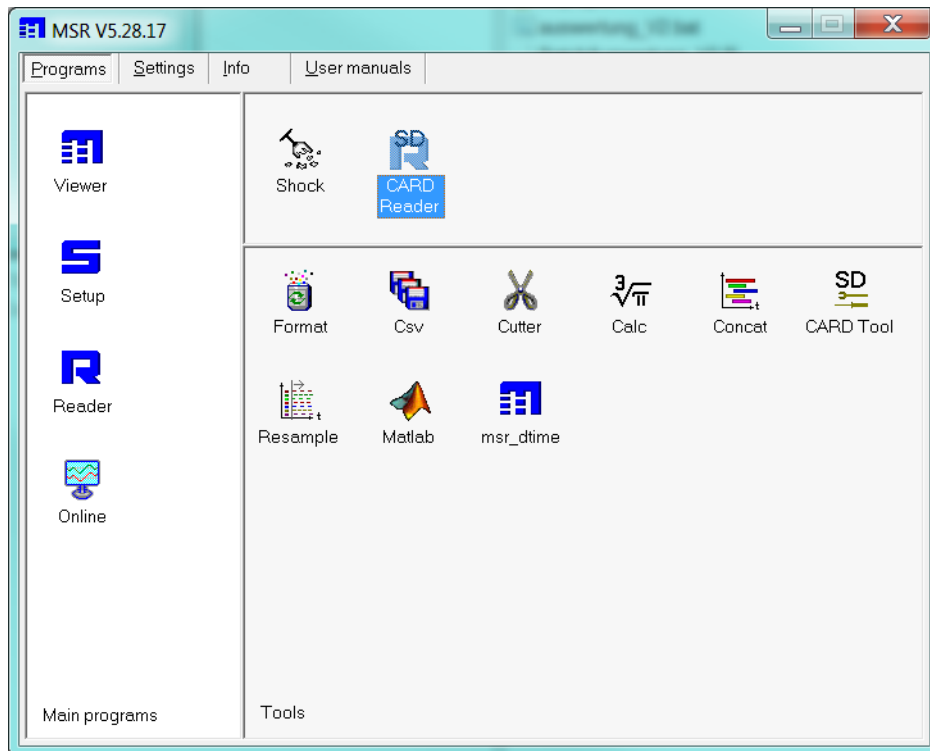


2. Plug the USB / SD card adapter into the USB socket on the PC and click **Start**.

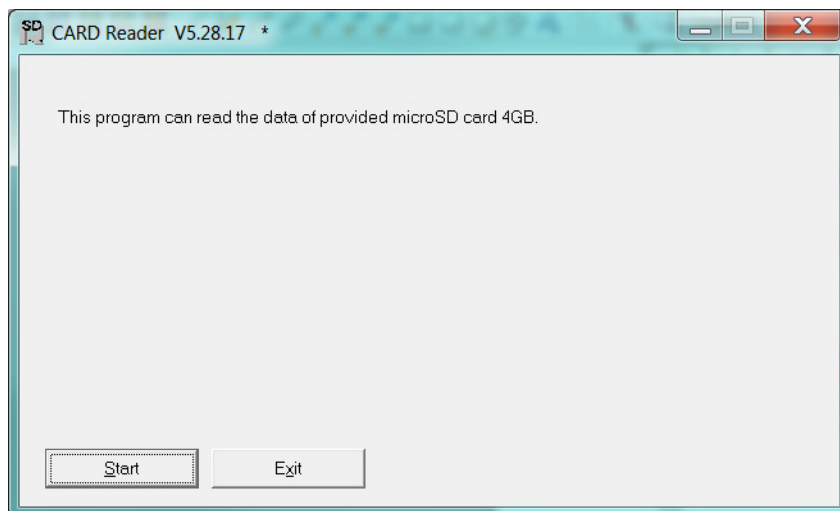


3. Select the desired data record (msr.dat) on the removable drive (SD card) and click **OK**.

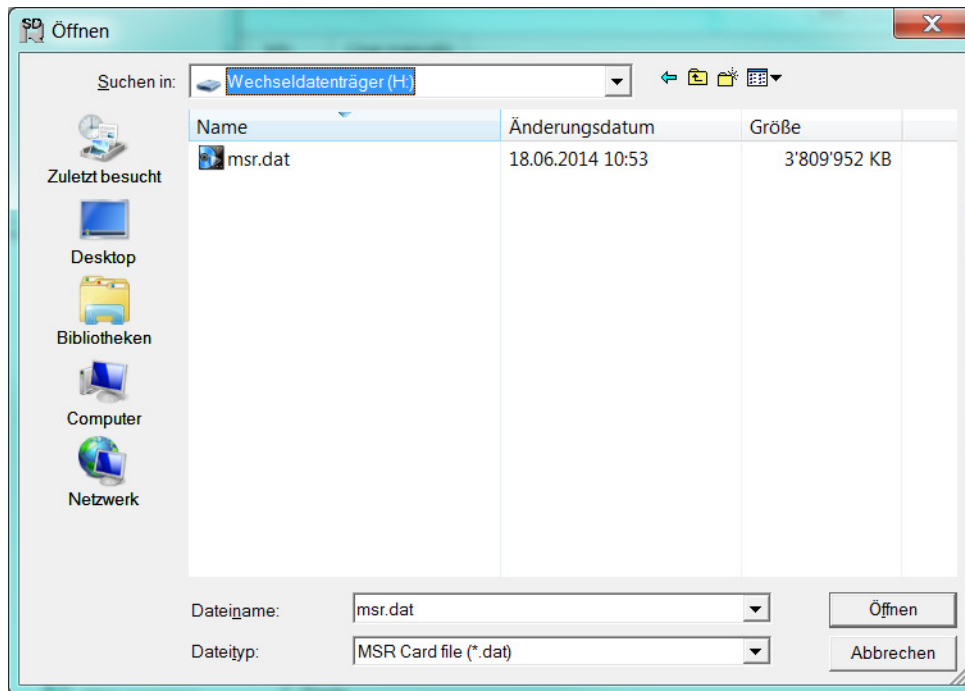


4. The table of contents is reading.

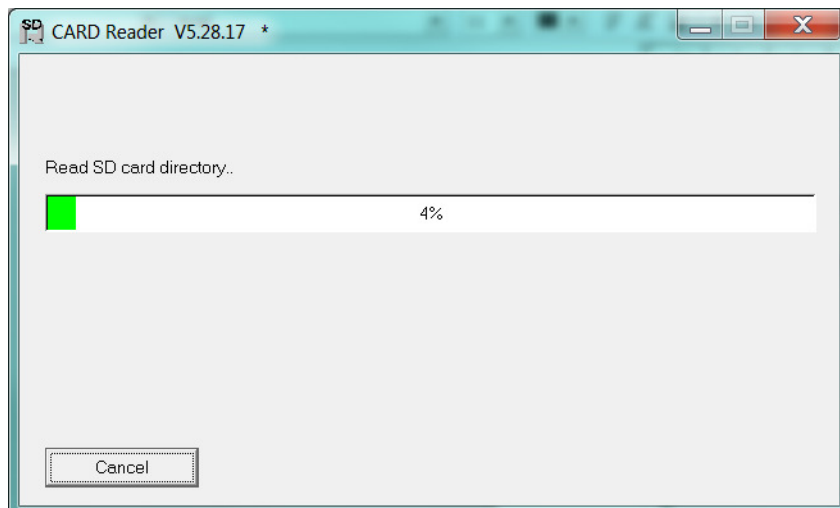


5. Select record and click **Next**.

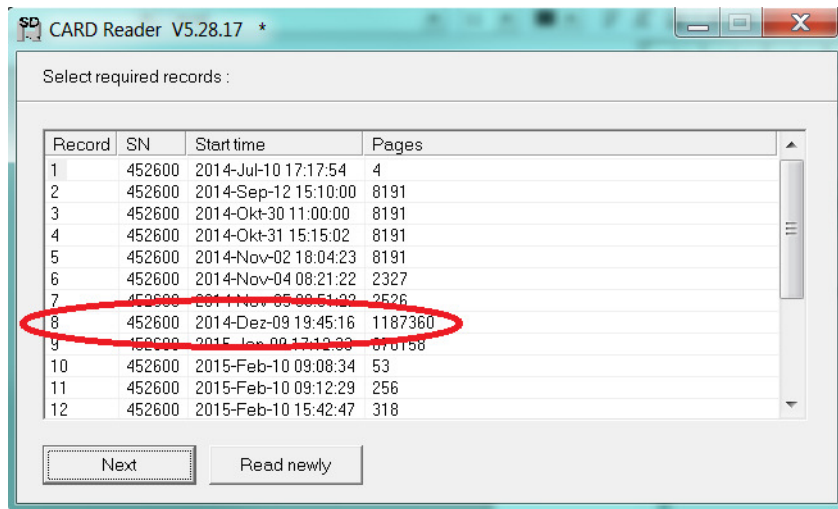

6. The content of the record is displayed. Select preferred channels and click **Next**.

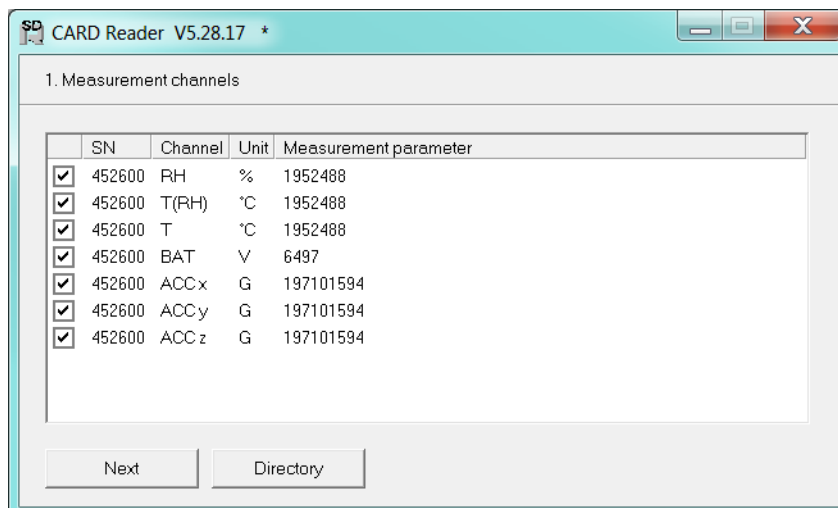

7. Select preferred beginning and end time and click **Next**.

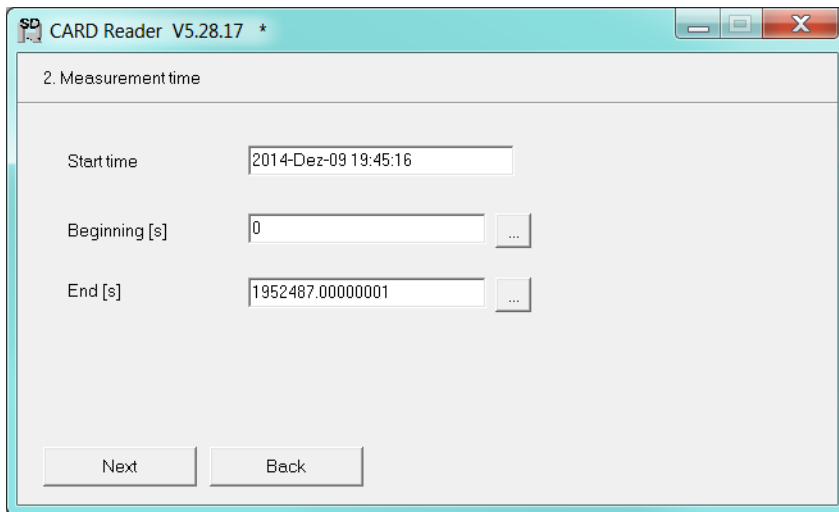

SD CARD Reader V5.28.17 \*

2. Measurement time


Start time 2014-Dez-09 19:45:16

Beginning [s] 0 ...

End [s] 1952487.00000001 ...

Next Back

8. Select file format, limit the maximum file size and click **Next**.

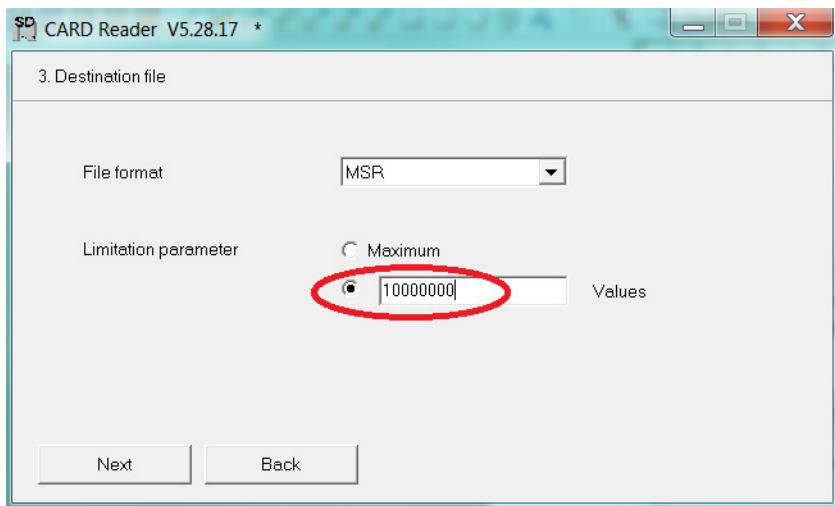

SD CARD Reader V5.28.17 \*


3. Destination file

File format MSR


Limitation parameter  Maximum  10000000 Values

Next Back

9. Deselect options and click **Next**.

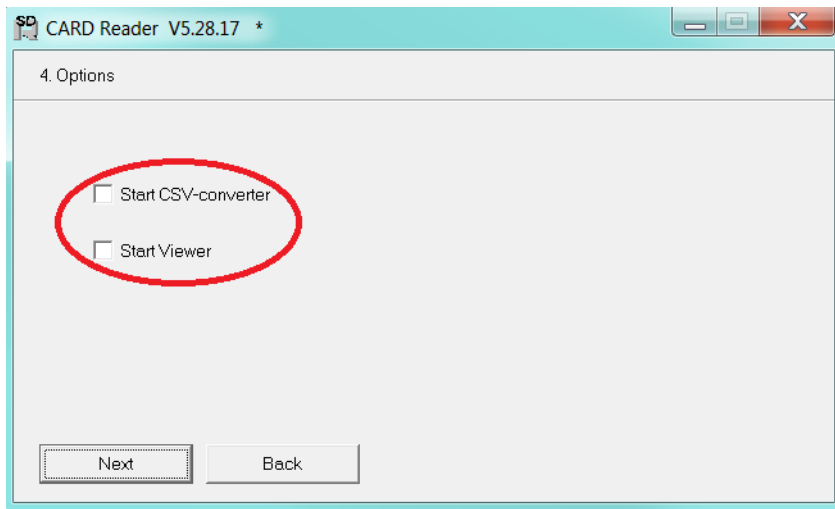

10. The record data is reading.

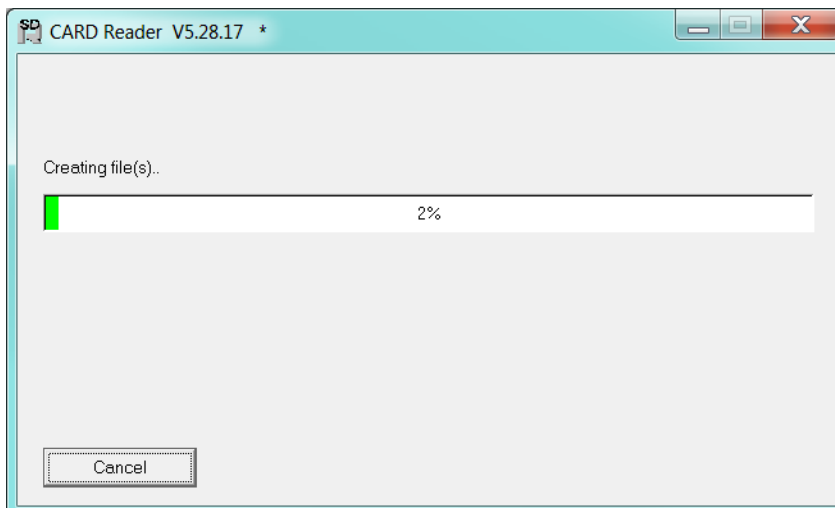

11. The reading is over. All files created are listed. Click **Exit**.

